

SR-909 POWER TRANSFORMER WIRING 110V


PSU BOARD V1.4

PRIMARY 1 BLACK - PIN A
PRIMARY 1 RED - PIN C
PRIMARY 2 BLACK - PIN D
PRIMARY 2 RED - PIN F

18V AC BLUE - PIN 3
18V AC WHITE - PIN 6
18V AC BLUE - PIN 5

9V AC GREEN - PIN 1
9V AC GREEN - PIN 2

PIN B - NOT CONNECTED
PIN E - NOT CONNECTED
CHECK BOARD VERSION!

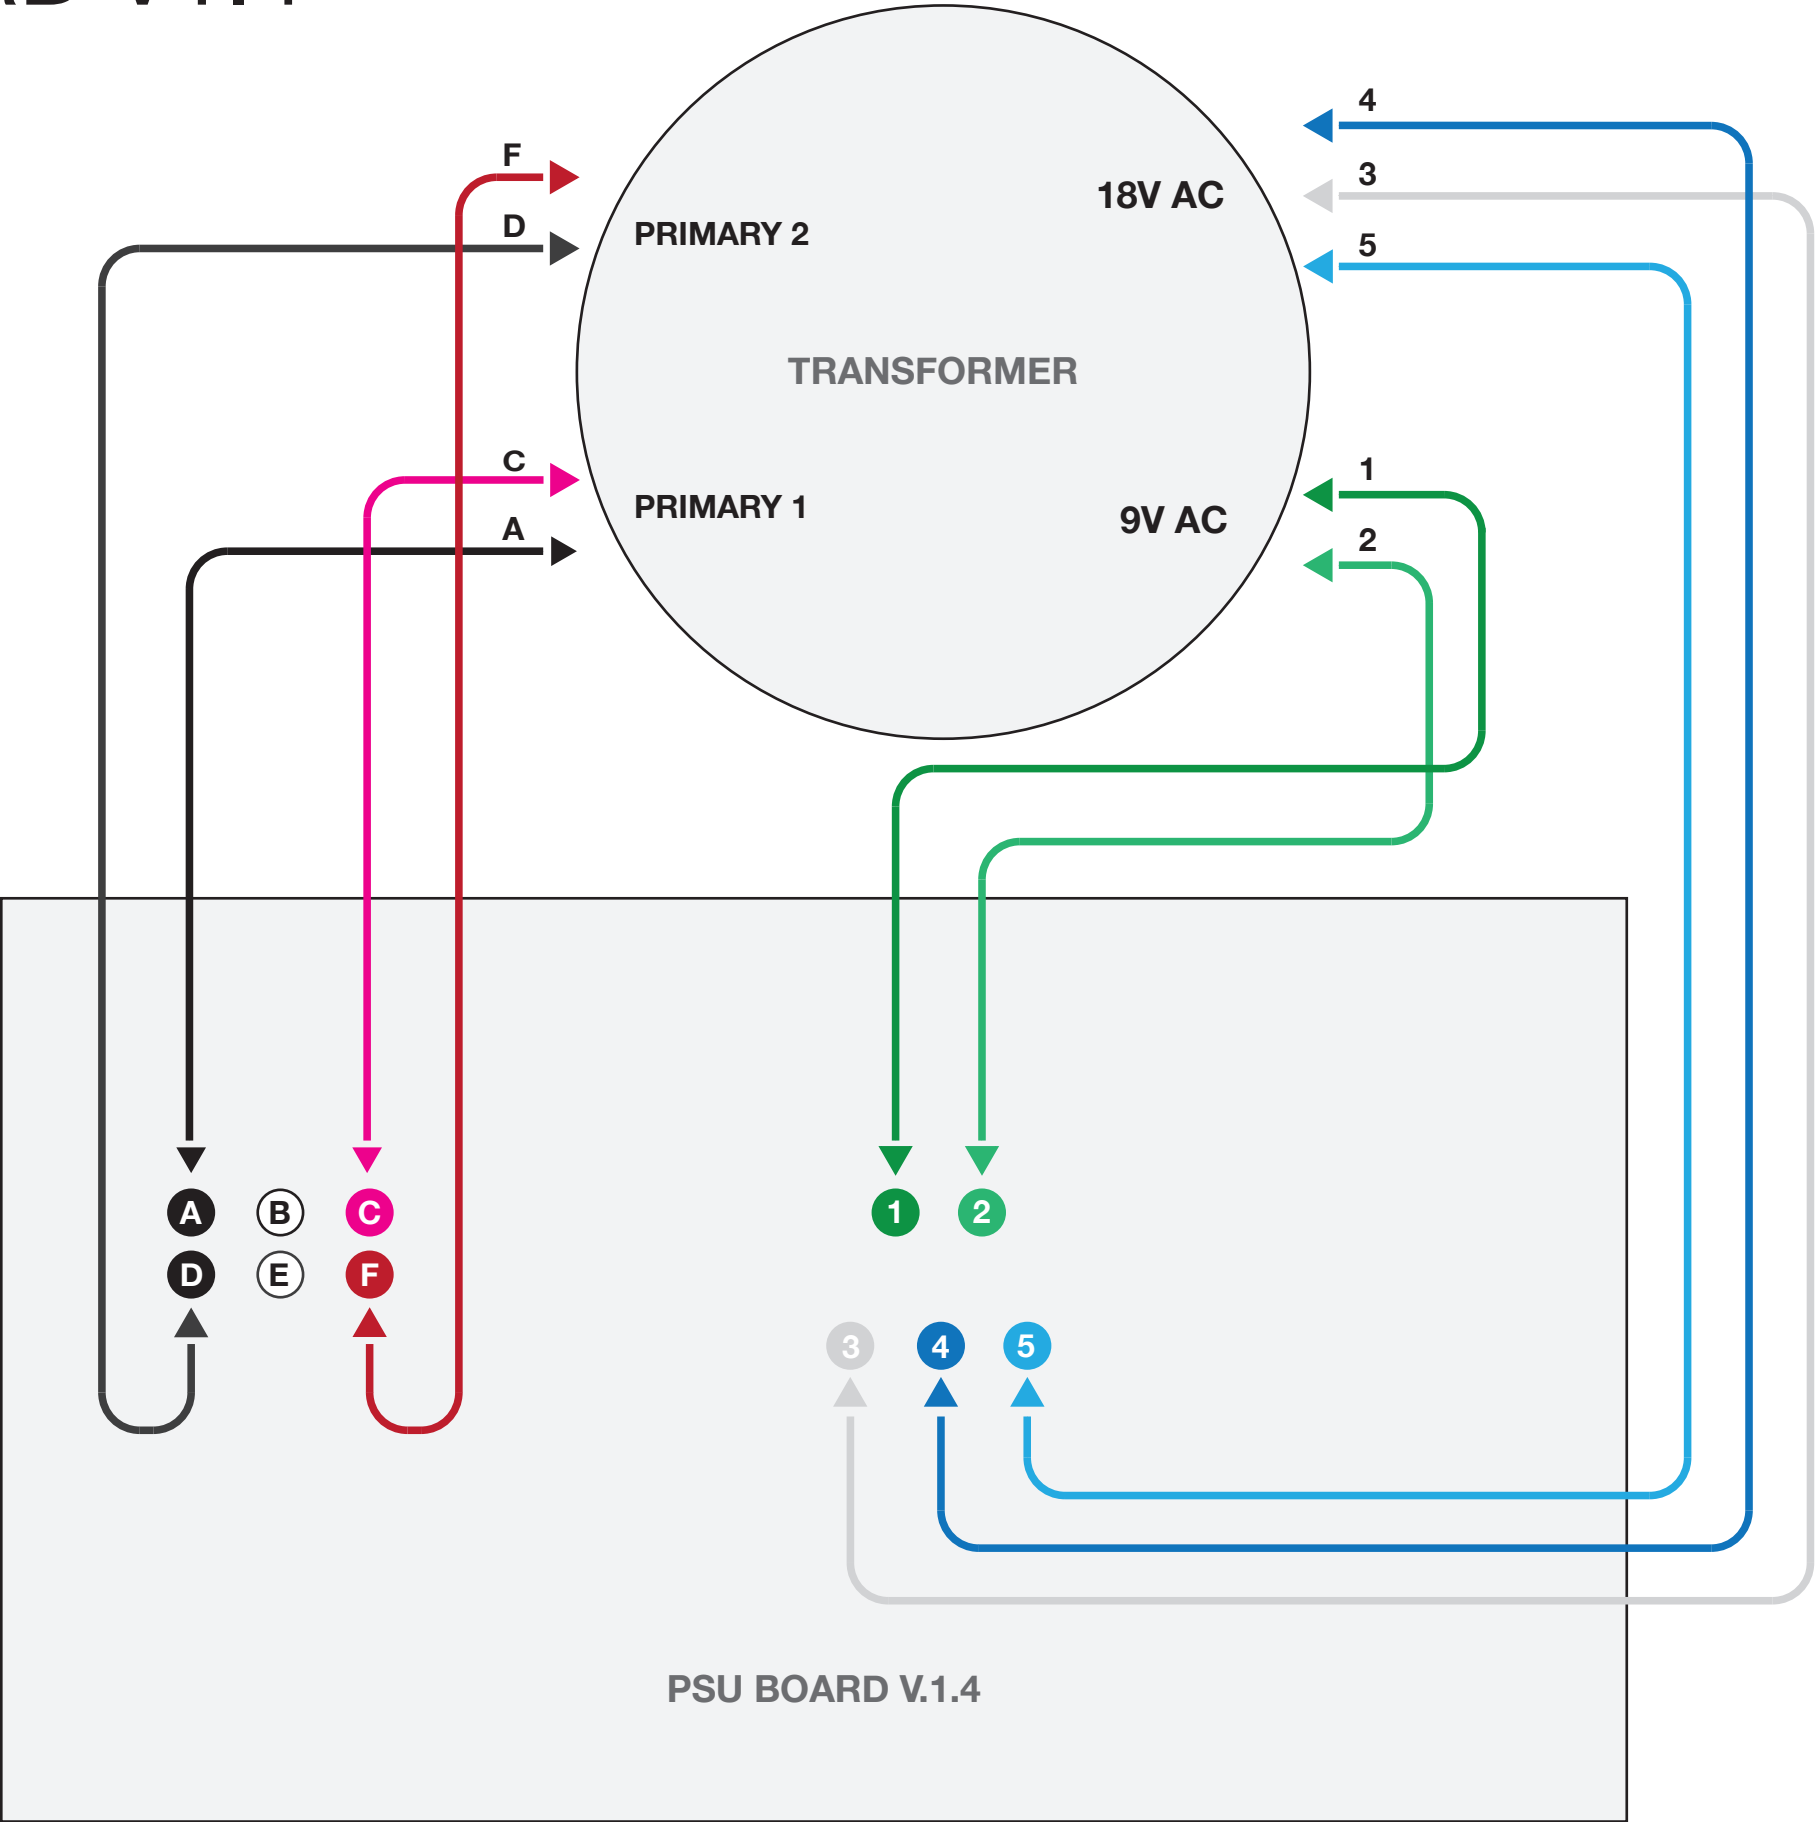


SR-909 POWER TRANSFORMER WIRING 230V

PSU BOARD V.1.4

PRIMARY 1 BLACK - PIN A
PRIMARY 1 RED - PIN B
PRIMARY 2 BLACK - PIN E
PRIMARY 2 RED - PIN C

18V AC BLUE - PIN 3
18V AC WHITE - PIN 6
18V AC BLUE - PIN 5

9V AC GREEN - PIN 1
9V AC GREEN - PIN 2

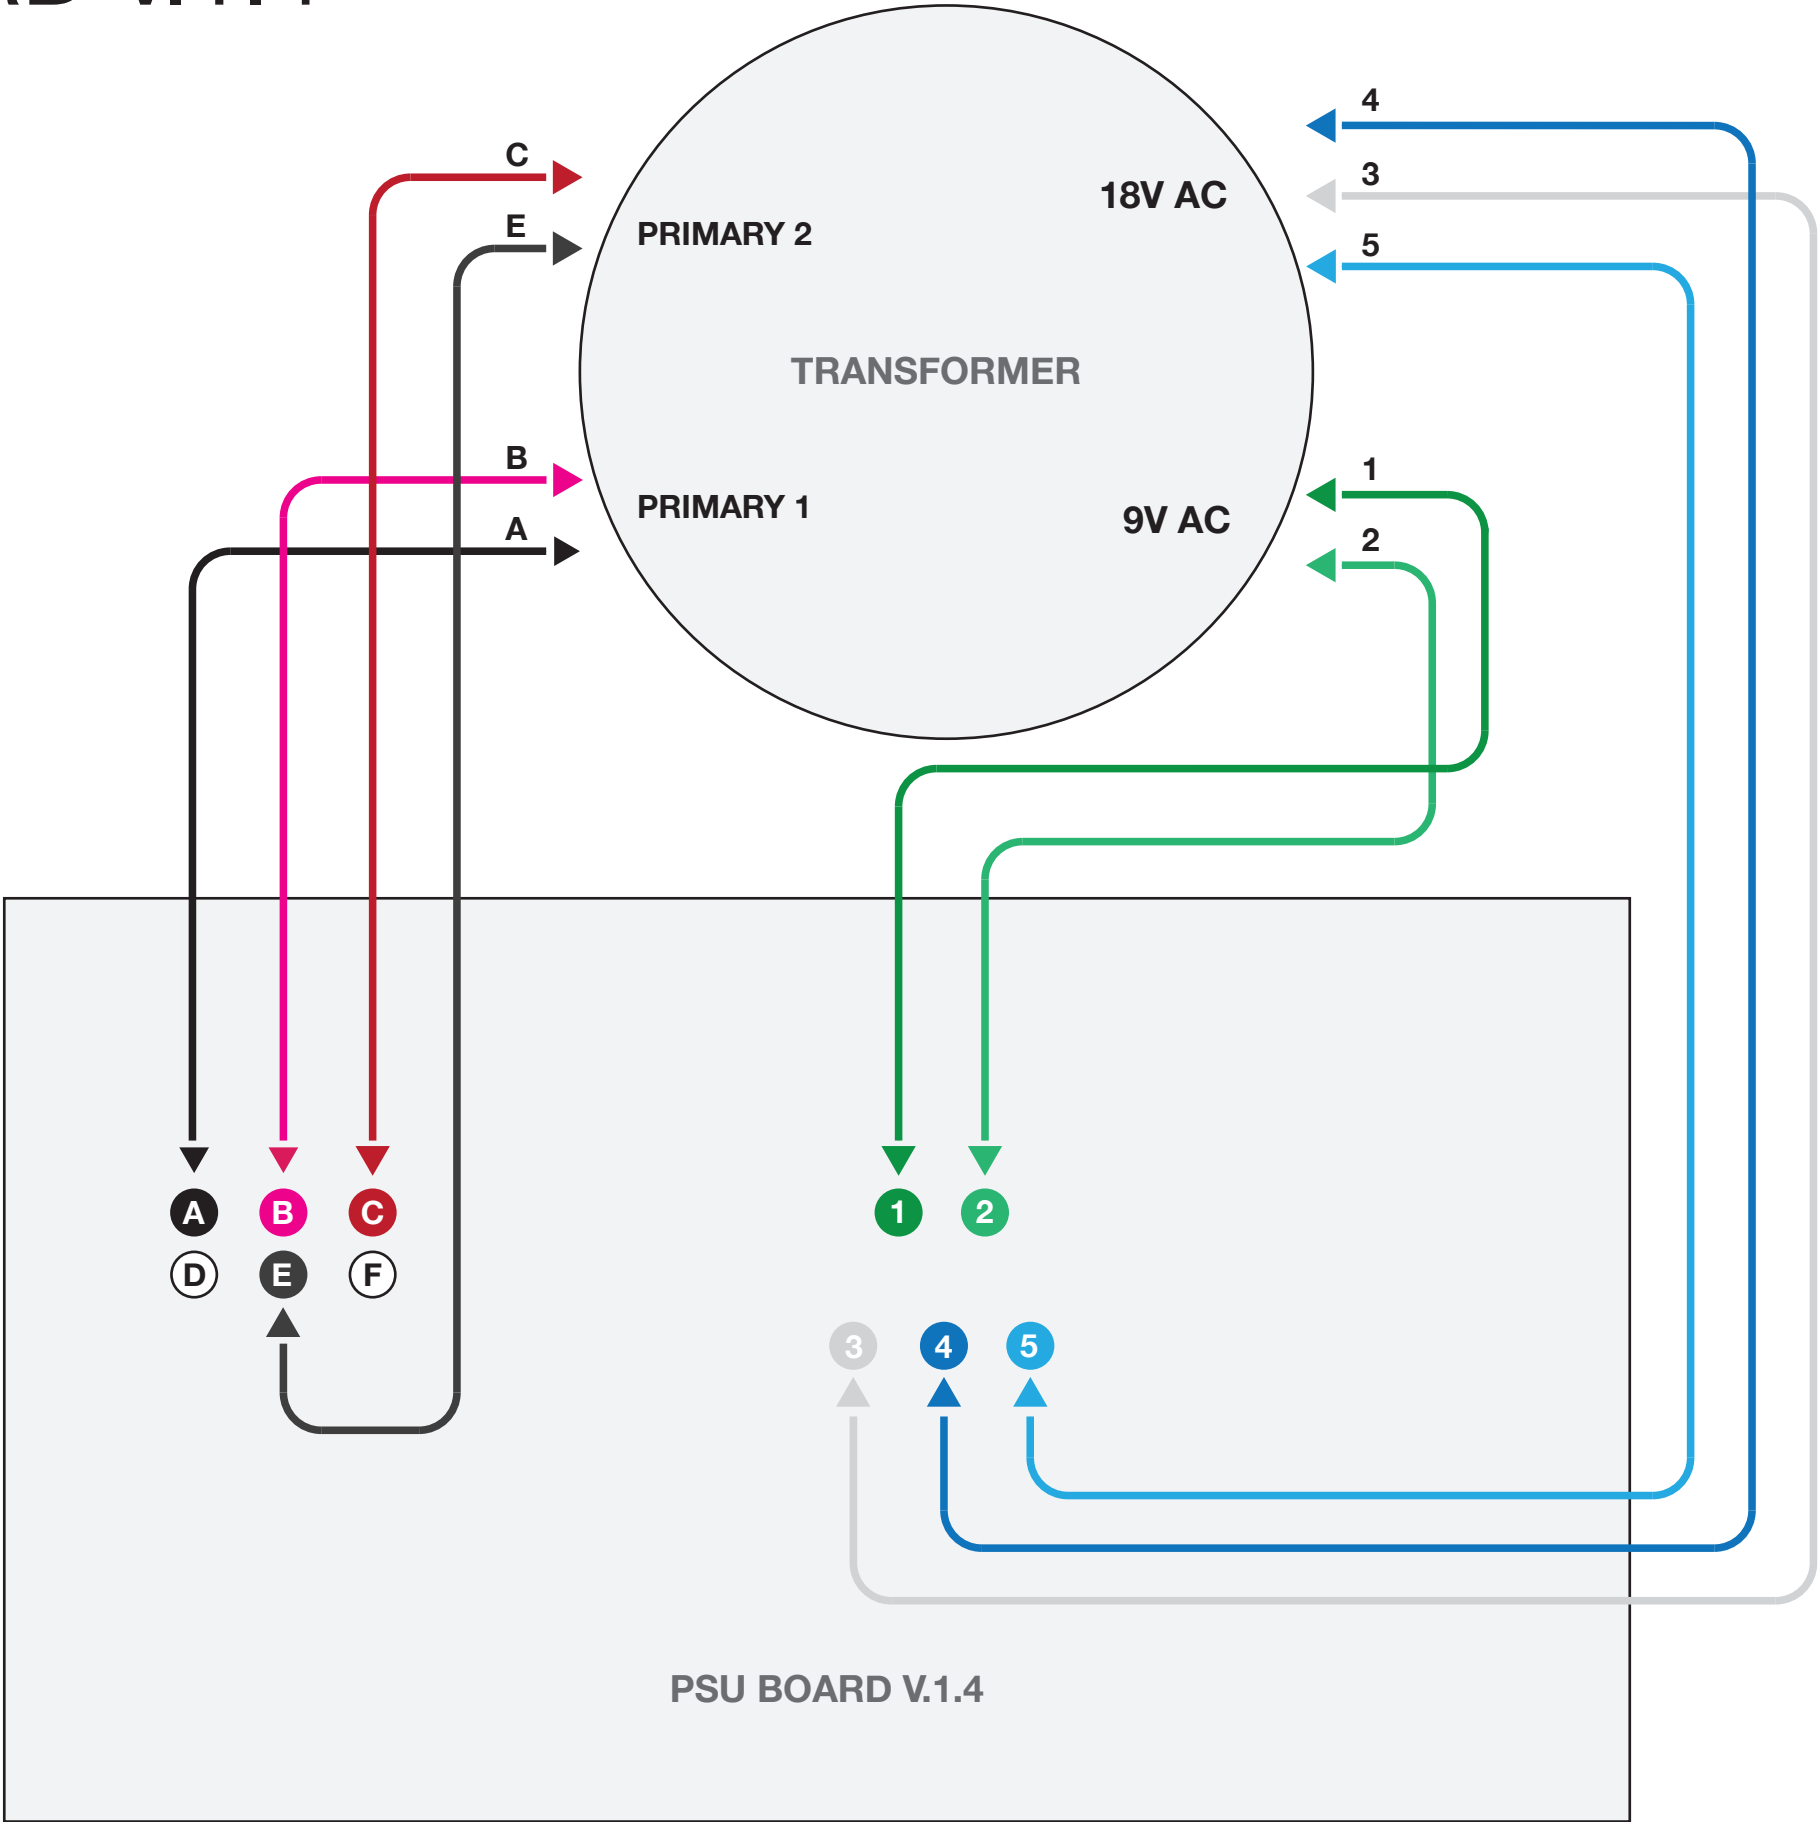

PIN D - NOT CONNECTED
PIN F - NOT CONNECTED
CHECK BOARD VERSION!